

How to Plug an airCube Router into your Home Network for AP Hosts

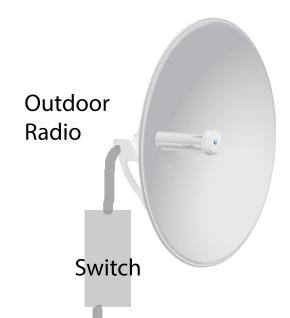

Do Not Use this Port

Back of airCube

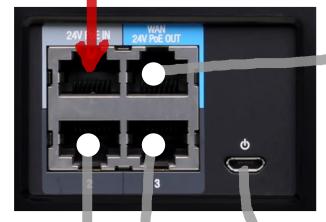

5-V Micro-USB Power Supply



Home Network Direct Wires (optional)